

USER GUIDE

MECHANICAL TIMER, 24HR

When replacing any part on this appliance, use only spare parts that you can be assured conform to the safety and performance specification that we require.

Do not use reconditioned or copy parts that have not been clearly authorised by Ideal Boilers.


For the very latest copy of literature for specification and maintenance practices visit our website www.idealboilers.com where you can download the relevant information in PDF format.

September 2018 UIN 204810 A10

Mechanical Timer, 24 Hour

This kit is suitable only for the domestic gas boilers listed below:

Logic Combi C Logic Combi C IE Logic Combi ESP1 Logic Code Combi ESP1 Logic+ Combi C Logic Max Combi C Vogue Combi C GEN2 Vogue Combi C IE GEN2 Vogue Max Combi

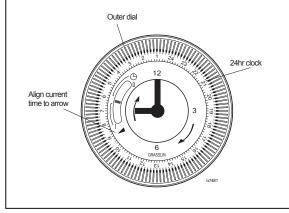

SETTING UP

The outer dial should be set to the current time. Rotate the dial slowly in a clockwise direction, until the correct hour is aligned with the arrow printed on the dial.

Note that the outer dial is printed with the 24hr clock

8.00am = 8 on the dial,

8.00pm = 20 on the dial.


Clock hands will allow for fine adjustment of the current time setting of the dial.


Do not attempt to rotate the dial in an anticlockwise direction.

 \triangle

The national regulations and respective safety instructions are to be observed.

Interferences and changes to the device will lead to cancellation of the warranty.

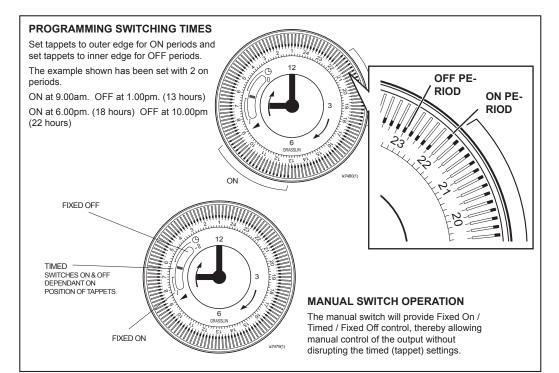

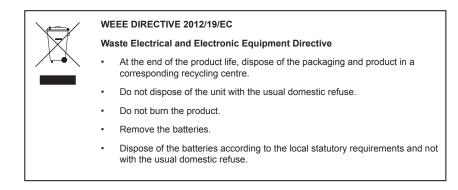

Ideal Boilers Ltd., P.O. Box 103, National Ave, Kingston Upon Hull, HU5 4JN. Tel. 01482 492251 Fax. 01482 448858. Registration No. London 322 137.



Ideal Boilers Ltd., pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

