

**ELECTRONIC PROGRAMMABLE ROOM THERMOSTAT**



Outer plastic wheel rotates for temperature adjustment



Transceiver Model may vary dependent on boiler model

 
**FEATURES**

- + Simple User Interface
- + Summer/Winter Time (GMT/BST) automatically updated
- + Timer Options
  - 7 day : Control of heating
  - 5 + 2 : Different at weekends
  - Weekly : All 7 days the same
- + Room Temperature Control
- + Wireless Connection
- + Override
- + Boost

**Thermostat Location**

The Thermostat should not be located within one metre of any other wireless devices (e.g. WiFi Boosters, Wireless Routers, Sky Boxes)

**THERMOSTAT HOME SCREEN**

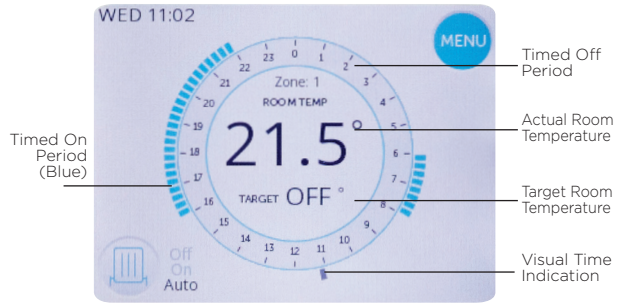

**Colour Home Screen**

If Central Heating is Timed On or Continuously On then the Target Room Temperature can be adjusted by rotating the outer plastic wheel of the device

If Central Heating is Timed Off then Central Heating can be activated by rotating the outer wheel until the desired Room Temperature is shown (Boost)

**TIMED/ON/OFF (OPERATING MODE)**



Tap Screen & Press  to Change the Central Heating Operating Mode (from Timed to Continuously On to Continuously Off)

**IMPORTANT INFORMATION:**

**Suitable for the following products:**  
All Logic and Vogue Combi Models

**Class V** when used in isolation. **Class VI** when used with an outside sensor. **Class VIII** when used with more than 2 zones.  
Contribution to seasonal space heating energy efficiency 3% (**Class V**), 4% (**Class VI**), 5% (**Class VIII**).

## CHANGING CENTRAL HEATING SCHEDULE



 
Tap the screen  
Press  
MENU




Press  
HEATING  
SCHEDULE




Press  
MODIFY

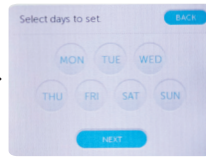

 
Press on the days  
you'd like to set  
Press NEXT

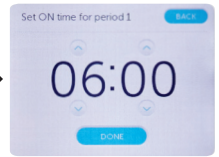

 
Set the On Time using  
the up and down  
arrows  
Press DONE

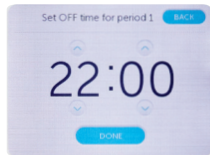

 Set the Off Time  
required using the up  
and down arrows  
Press DONE

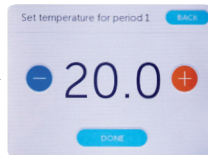

 Set the Temperature  
required using the  
+ and - buttons  
Press DONE

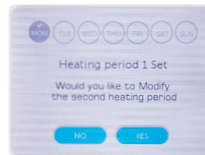

To add another On  
Period press YES  
If no additional  
periods are required  
press NO



Press  
DONE

## REVIEW CENTRAL HEATING SCHEDULE



Tap screen and  
Press  
MENU



Press  
HEATING  
SCHEDULE



Press  
REVIEW



To change the  
Schedule press EDIT  
To see the next day  
press NEXT  
To exit press EXIT  
from Sunday's  
Schedule

## OVERRIDE CENTRAL HEATING



Tap the screen  
Press  
MENU



Press  
OVERRIDE HEATING



Press the desired  
option



Set the time required  
using the up and down  
arrows  
Press DONE



Press DONE  
Note: the override period  
will be shown by blue  
flashing tappets

 
## CANCEL CENTRAL HEATING OVERRIDE




Tap screen and  
Press  
MENU



Press CANCEL  
OVERRIDE

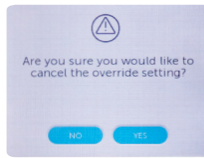

Press the desired  
option

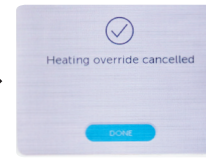 

Press  
DONE

## SETTING THE TIME



 
Tap screen and  
Press  
MENU



Press  
HELP & SETTINGS




Press  
CHANGE TIME

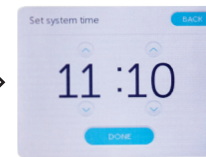


Set the On Time using  
the up and down arrows  
Press DONE

## SETTING THE DATE

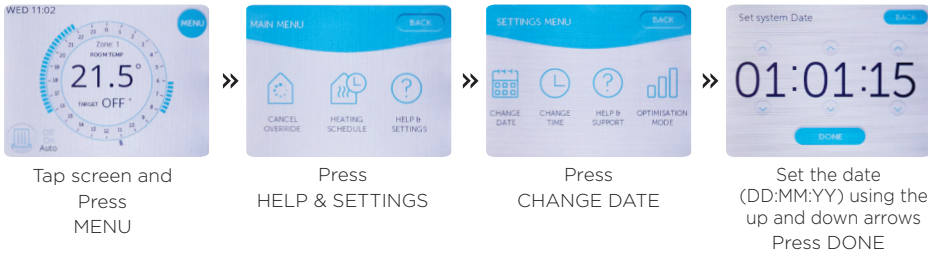 

## TRANSCIVER UNIT (BOILER MOUNTED)

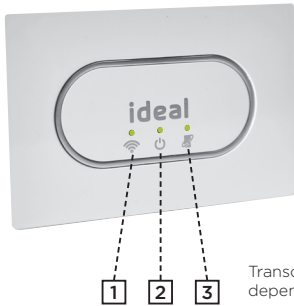 

Transceiver Model may vary dependent on boiler model

### 1 Wireless Connection to Programmable Room Thermostat

If this light is off then there is no connection between the boiler and the Room Thermostat

Try replacing the batteries in the Room Thermostat

### 2 Electrical Supply

If this light is off then there is no power to the transceiver

Check that the isolation switch to the boiler is switched on

### 3 Boiler Connection

If this light is off then there is no connection from the boiler to the transceiver

 
The installer should check the wiring from the boiler to the transceiver

## BATTERY REPLACEMENT

- Unclip the Thermostat from its cradle by sliding the Thermostat upwards
- Using a flat bladed screwdriver, pop off the rear cover
- Replace batteries
- Refit battery cover

The screen may go blank, if so gently press the screen or rotate the outer plastic wheel to wake the Thermostat

Batteries should operate for approximately 18 to 24 months. Only good quality alkaline batteries are to be used

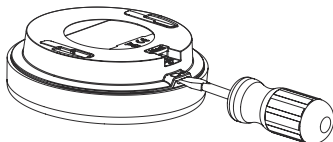

## CLEANING

For normal cleaning simply dust with a dry cloth. To remove stubborn marks and stains, wipe with a damp cloth and finish off with a dry cloth. DO NOT use abrasive cleaning materials.



### WEEE DIRECTIVE 2012/19/EC

#### Waste Electrical and Electronic Equipment Directive

- At the end of the product life, dispose of the packaging and product in a corresponding recycling centre.
- Do not dispose of the unit with the usual domestic refuse.
- Do not burn the product.
- Remove the batteries.
- Dispose of the batteries according to the local statutory requirements and not with the usual domestic refuse.